# NTS 03-E QUICK START GUIDE



## **QUICK SETUP**

- 1. Install antenna in a location visible to the sky; connect to lightning arrestor (Optional)
- 2. Install the NTS 03-E in the desired location and connect to the antenna
- 3. Connect the NTS 03-E to the network switch
- 4. Connect to power, ensuring correct voltage is used
- 5. When running the NTS 03-E for the first time, Time, Output, Network, and Security settings can be configured by running the Configuration Tool software on any PC on the same network as the NTS 03-E. See Configuration Tool Tips and Networking Tips for more help
- 6. Once the NTS 03-E is fully setup, connect the Ethernet adapters to your network as desired

## **NETWORKING TIPS**

- If the NTS 03-E does not appear when you press Discover in the Configuration Tool, either connect the NTS 03-E directly using a cross-over Ethernet cable, or alternatively download and install the driver from Tekron.com to connect your NTS 03-E using a USB cable
- If using DHCP: before powering up ensure the NTS 03-E is connected to the network
- Ensure your firewall(s) has UDP exceptions for the configuration program and ports 9992, 9997 & 9999
- Ensure you have administrative rights on your PC

## **DEVICE CONNECTION TIPS**

 Where connecting external devices to P2 and/or P3 twisted pair cable is recommended

## **CONFIGURATION TOOL TIPS**

- The Configuration Tool software is available from www.tekron.com
- To connect to your NTS 03-E: press the Discover button, then select the NTS 03-E from the list, then press the Configure button Default login is – User Name: admin, Password: Password\*
- A new password can be set by pressing the button
- In most cases, set the "Cable Delay" to 4ns for every meter of antenna cable, and the "Mask Angle" to 5 degrees. This can be set on the GPS tab
- The connection settings for each Ethernet adapter can be set on the Network Tab.
  On this tab you can also set your desired PTP & NTP settings

\*Warning: Please ensure that you record your password and store it in a secure manner. In accordance with Cyber Security "best practice", if the administrative passwords are lost, the device must be sent back to the manufacture to recover the



Rear Panel - Inputs & Outputs





